


Guidelines to install sorting table doors

Using hardware provided, find most suitable location for door to mark cutout line and hinge bolt centers.


Cutting through top rail is optional

Be sure to leave room for latches to operate.

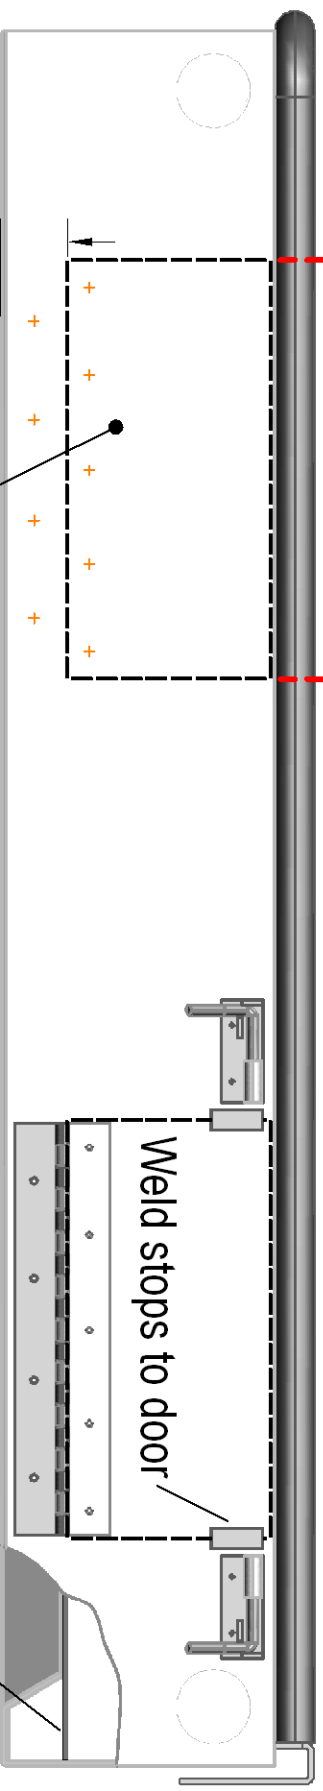

Drill holes first, then cut out door.

Locate hinge center 3" from bottom of table.

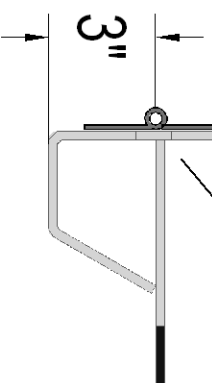

Cutaway showing table top.

Drill holes to access hinge fasteners

